Spare Parts

ThinkTop® Basic Intrinsically Safe (2305 –)
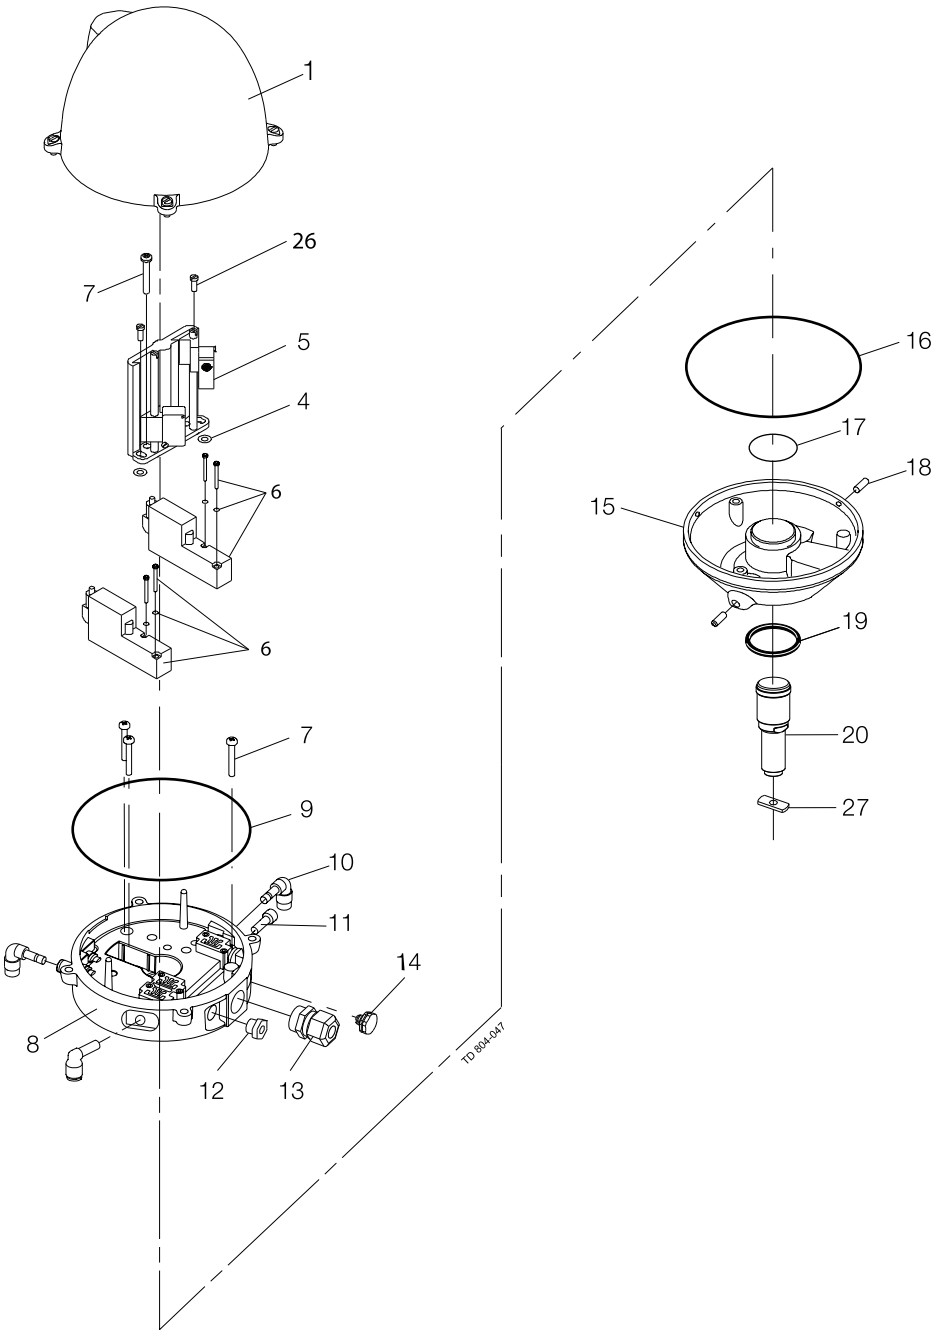

2050-0029
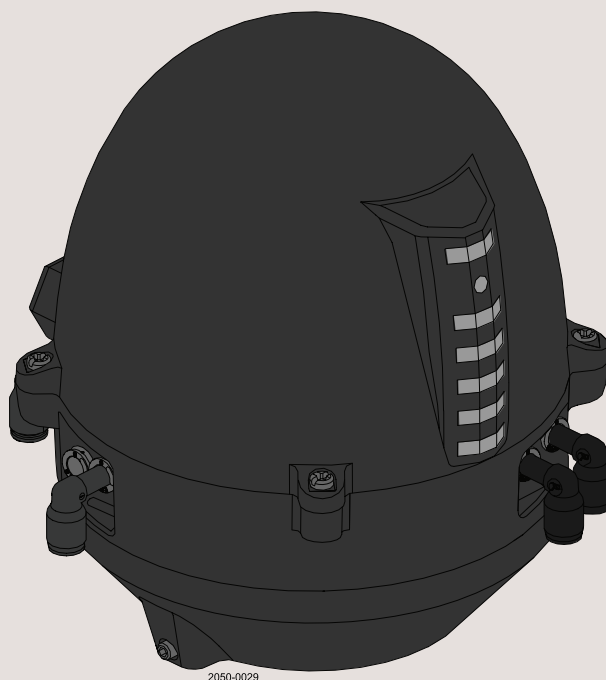
100007172–EN2   2023–01

Original manual

Table of contents

The information herein is correct at the time of issue but may be subject to change without prior notice

TD 804-047

Pos	Qty	Denomination	SRC, SMP–BC, SMP–SC SF, Unique Mixproof, Unique SSV ATEX, SMP–TO, LKB (LKLA–T), Koltek MH, SBV
1	1	Shell, complete	
4	2	Washer	9611995377
5	1	Frame cpl. with sensors	8010018878
6	1–2	Solenoid valve (3/2)	9611994924
7	4	PT screw	9611993457
8	1	Base, complete	
9	1	Special X–ring, grey	9613456401
10	2–3	Air fitting elbow, metal plug, black rim, ø6mm/ø6mm .	9611995678
	1	Air fitting elbow, metal plug, grey rim, ø6mm/1/4"	9611995679
11	1	Blow–off valve	9612563603
12	1	Thread plug, PG7, ø3–ø6.5 mm	9611993407
13	1	Cable gland, PG11, Ex	8010020471
14	1	Gore vent	9611994722
15	1	Adapter complete	
16	1	Special X–ring, black	9612999401
17	1	O–ring	9611993350
18	2	Allen screw	9611993409
19	1	Special X–ring	9612569601
20	1	Indication pin, complete	8010018881
26	2	Screw	72018
27	1	Threaded plate (accessories for the Think Top)	3135707012

How to contact Alfa Laval
Contact details for all countries are
continually updated on our website.
Please visit www.alfalaval.com to access the information directly.